




Cotton Candy Machine Operation Manual

1. Plug the cord to the cotton Candy Machine and to the outlet
2. Turn Power button On
3. Turn Heat button On
4. Wait for 4-5 minutes
5. Grab just a little over half scoop of sugar floss
6. Pour sugar floss into the middle section of the bowl
7. With cone/straw catch the cotton candy coming out from the middle section of the bowl (roll cone in your hands to evenly spread cotton candy)
8. When there is no more cotton candy flying out from the middle – add another ½ scoop of sugar floss (each ½ scoop is enough for 1-2 portions)
9. When not in use – turn Heat and Power button off

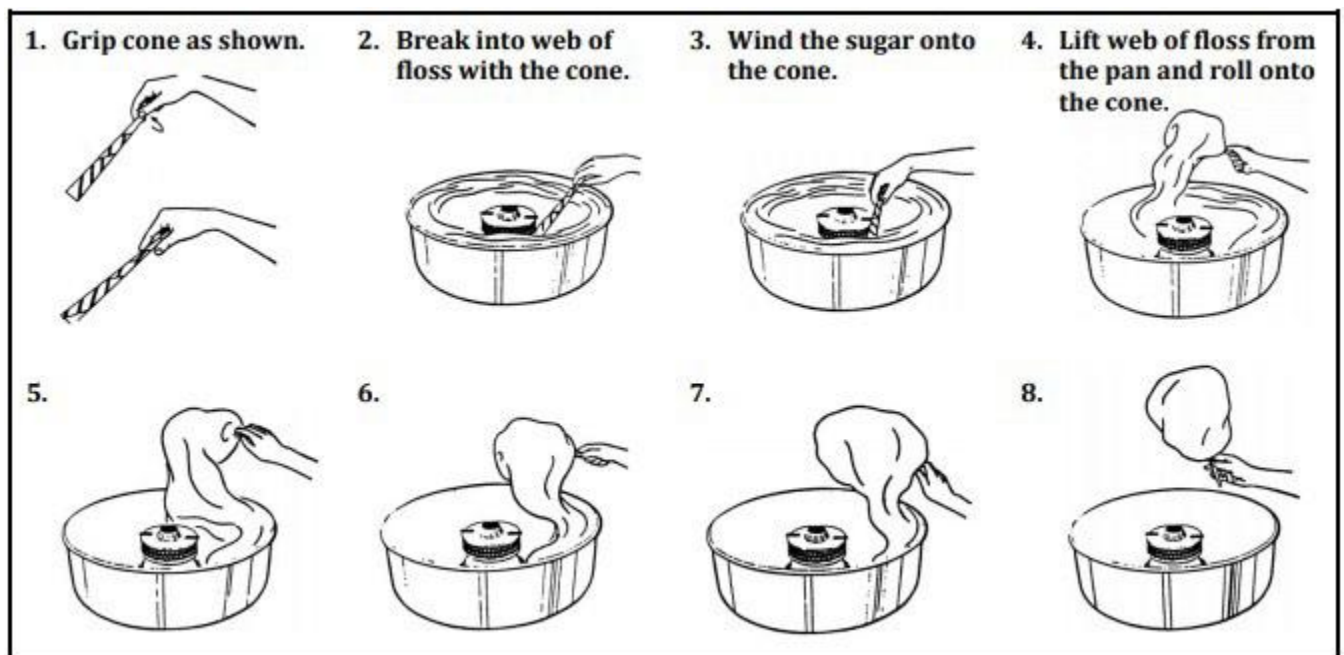

In case of equipment malfunction or damage, stop the operation and contact Jump Up Bouncers at 204-290-8381